


Self Priming Centrifugal Pump

FLUIDO Self priming pump can overcome the problem of air-bound by mixing air with water. After it gets rid of the water, the pump will continue recirculate move water like a standard centrifugal pump. Remind that self priming pump can't operate without water.




Self Priming Centrifugal Pump

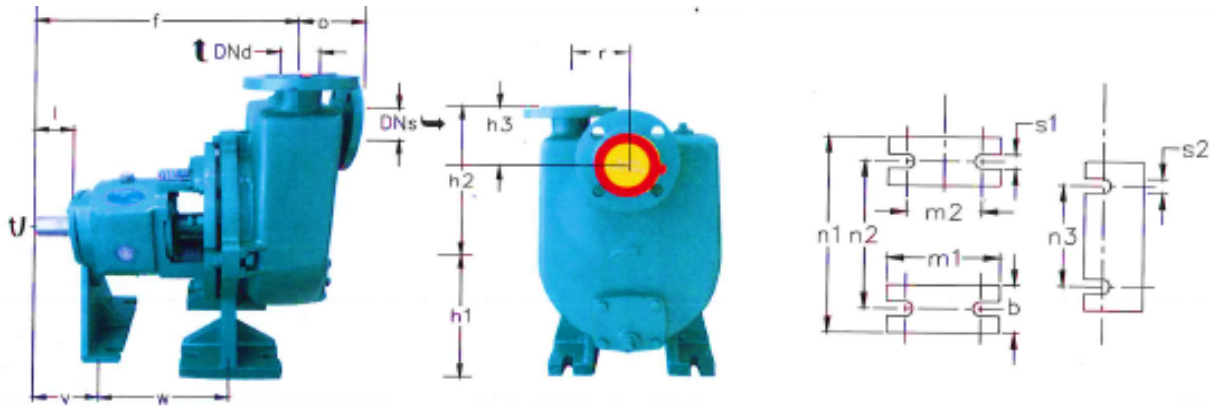

DIMENSIONS IN MM


PUMP	FLANGES		PUMP DIMENSIONS							FOOT DIMENSIONS										
	MODEL	DNd	DNs	a	f	c	h1	h2	h3	r	b	m1	m2	n1	n2	n3	s1	s2	v	w
AGSP	AGSP 40	40	40	90	455	545	250	253	75	110	90	180	150	310	245	185	18	14	140	230
	AGSP 50	50	50	105	465	570		272	85	95										
	AGSP 80	80	80	130	480	610		308	100	75										

FLANGES DETAILS

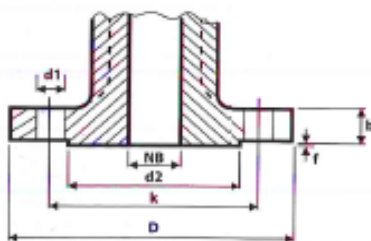

NOMINAL BORE	FLANGE		RAISED FACE		BOLTING	DRILLING		
NB	D	b	d2	f		NO	d1	k
40	150	18	88	3	M16	4	18	110
50	165	20	102	3	M16	4	18	125
80	200	22	138	3	M16	8	18	160

COUPLING BORE DETAILS

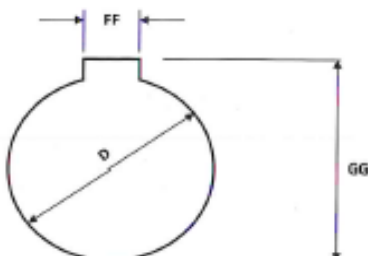

D (H7)	GG	FF
0	0	
42 + 0.025	45.3 + 0.2	12 ± 0.0215